Usb DTD (Data Transfer Device) and software quick guide

before unzip the files downloaded from Daystate web page

In some cases , when control panel file it's unzipped , can be recognized as a virus and/or deleted directly from your antivirus system.

If this happens, when unzip control panel, you will have to disable your anti virus system before

In some cases , when control panel file it's opened , can be recognized as a virus and/or deleted directly from your antivirus system.

If this happens, when open control panel, you will have to disable before your anti virus system or create an exception (to do this you will need to see your anti virus system instructions)

In other some cases , when control panel file it's opened , your antivirus system will automatically analyze the software, while it is analyzed the control panel box could be highlighted / marked by your anti virus, in this case wait for the scan to finish, the program restarts itself and you can use it

NOTE:

- usb DTD is a device that allows you to communicate between computer and gun, it is not a usb storage
- usb DTD device and software are compatible with <u>Windows system only</u>
- To install DTD , follow "USB-DTD installation" instrutions
- SOFTWARE , there are 4 main software:
 - 1. Usb DTD driver
 - file that allows the PC to recognize and use the usb DTD correctly.
 - <u>It is rarely necessary</u>, Windows should be able to automatically recognize the DTD, but in some cases, such as an old version of Windows or not updated or not connected to the network, it may be necessary
 - this files cannot be opened directly, follow "USB-DTD installation" instrutions
 - 2. Control Panel (.exe)
 - is the graphic user interface software that allows to manage the gun by the PC
 - Before using it, read the instructions carefully to avoid losing your gun data
 - there are 2 versions of control panel;
 - **ADMIN** : for factory or authorized dealers only ;
 - allows complete control of all gun parameters and to manage the version (FAC / Sub12)
 - USER : for customers ;



if the sub12 gun is connected, the control panel will make available only some settings, but it will not be possible to alter the firing parameters to exceed the limit of 12 ft / lbs , and it will not be possible

to load the FAC firmware

if the FAC gun is connected, the control panel will make all settings available

3. Firmware (.hex)

- is the file that set and manages all the gun functions
- this file cannot be opened directly, it can only be managed by the Control Panel
- Before using it, read the instructions carefully to avoid losing your gun data

4. Configuration file (.xml)

- is the file where all the gun settings are saved, including user settings and the firing tables set.
- this file cannot be opened directly, it can only be managed by the Control Panel
- <u>Before using it, read the instructions carefully to avoid losing your gun data</u>



Download files - instructions

1. Download file from Daystate web at this LINK



- 2. when download is finished, the file appears in the bottom left bar (highlighted in green in the image above)
- 3. click (x 2) the downloaded .zip file to open it
- (the software that opens the .zip file may vary depending on the software installed on your PC)
- 4. Extract folder / file

Add Ex		And a second second							Contraction of the local division of the loc	Course of
Add Ex	tract To	Test	View	Delete	Find	Wizard	Info	VirusScan	Comment	SF
N 🚺 [DW-CP108	0-FW122	.zip - ZIP a	rchive, unp	backed size	e 6.075.596	bytes			
me			^				Size	Packed	Туре	
									Cartella di f	ile
DW-CP108	0-FW122								Cartella di f	ile

Usb DTD installation / connection instructions



- 1. Connect the USB C-C cable to DTD
- 2. Connect DTD to the PC
- 3. After a few seconds, the PC should automatically detect the connected DTD and a confirmation message should appear at the bottom right
- 4. If Windows cannot recognize DTD , run follow instructions :
- 4.1 Click the bottom-left Start button on desktop, type device manager in the search box and tap Device Manager on the menu.

Dequelo	Rin Gundham Di	Plock III	
	Device Manager Control panel		
ŵ	Settings		
0	B Update device drivers		
an a	Web		
Ŕ	ho device manager		
	, device management		
	Ø device manager is blank		
0	My stuff $ ho$ Web		
	device manager	다 😋 🥃 🛱	



4.2 the unrecognized device is identified with a yellow icon, find it and right mouse button on it> update driver



4.3 Select broswe my computer fo driver software

How do you want to search for drivers?
→ Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.
→ Browse my computer for driver software Locate and install driver software manually.



4.4 Find and select "USB-DTD driver" folder > OK

	Browse For Folder		
	Select the folder that contains driver	rs for your hardware.	
	📃 Desktop		
	Dibraries		
	▷ 🖳 Computer		
	Network		
	USB-DTD driver		
	Eolder: USB-DTD driver		
	OK	Cancel	
	N	lh	
4.5 click NEXT			
4.5 CICK NEXT			
			×
÷ 1.0	Jpdate Drivers - Realtek(R) Audio		
Bro	wse for drivers on your computer		
	use for any ers on your computer		1
Sear	ch for drivers in this location: SB-DTD driver	Y Browse	
	clude subfolders	Dionschi	
	Let me pick from a list of available dr	rivers on my computer	a harmony
	same category as the device.	nth the device, and all drivers in the	
		· · · · · · · · · · · · · · · · · · ·	11.0
		Nevt	ancel
		Next C	
4.6 Wait installation and when finish	click CLOSE		
			~
← Update Drivers -	×	- Update Drivers -	~
		Windows has successfully updated	your drivers
Installing drivers		Windows has finished installing the drivers fo	r this device:
			_
			Close

Daystate 🕀

Control Panel main instructions



- 1. Open Daystate control panel
- 2. With DTD connected to PC , connect USB-C cable to gun
- 3. If the USB cable is connected to the gun off, the message "SERVICE LOADER" will appear on the display
 - In this case , wait ten seconds to self exit from "service loader " mode and gun display back to default home screen
 - If the USB cable is connected to the gun already on , the display stay unchanged

SERVICE LOADER



✤ IDENTIFICATION OF COMMUNICATION PORT

- select the com port from the menu at the top right 1.
- depending by the configuration of your computer, more ports may be displayed
- To identify the correct port perform the procedure described below

DAYSTATE CO	NTROL PAN	NEL - USER			\times
File Device	?		Serial Port:	COM1	• 0
System Settings	User Setti	ings Power Table Message Log		COM1 COM3	
Display brightne	SS	Pressure sensor span			-
10	0 % 🖨	150.00 mV ≑			
Display timeout		Pressure sensor zero		-	
3	0s ~	0.0 bar ≑			
Display timeout	brigh.	Chrono timeout			
50	0 % ≑	500 ms ≑			
2 minu					
Read	Write				

- if the wrong port is selected:select the port > press "<u>READ</u>"(<mark>don't press WRITE</mark>) 2.
- an error message will be displayed

File Device	2									Serial Dort	COMI	. 0
File Device	1									Senai Porta	COIVII	
system Settings	User Settin	ngs	actory	Tables	User T	able	Messag	e Log				
Display brightne	ISS	Pres	ure ser	sor spa	an							
10	0 % ≑		0,	00 mV	÷							
Display timeout	611	Pres	sure ser	sor zei	o						0.77	
3	0 s ~			0,0 bar	-							
Viantautinanaut	brigh	Chro		0.00								
Jispiay umeour	brigh.	GIIIO	no time	out								
10 Self power-off ti	0 % 🖨		no timeo 5	out 00 ms								
30 secor	me nds ∨		no timeo 5	out 00 ms	•							
3elf power-off ti 30 secor	ne nds ∨		no timeo	out 00 ms	¢							
3elf power-off ti 30 secor	me nds v		no timeo	out 00 ms	•							
Self power-off ti 30 secor	me nds V		no timer E	out 00 ms								
Self power-off ti 30 secor	me Ids V		no timer E	out 00 ms	÷							
3elf power-off til 30 secor	me nds V		no timeo	out 00 ms	•							
Self power-off tin 30 secor	me nds V		no timed 5	00 ms	•							



- 3. if the correct port is selected : select the port > press "**READ**" (don't press WRITE)
 - an succeeded message will be displayed
- > attention, the default values will be replaced by the values stored in the gun



READ and WRITE button

- > in all control panel menus where there are READ WRITE buttons, the function is always the same
- based on the active menu, (System setting User setting etc etc ...):
- if **READ** is pressed, the data stored in the connected gun, <u>relating to the active menu</u>, will be loaded and shown on the control panel
- o if WRITE is pressed, the current data in the active menu of the control panel will be stored to the gun
- any parameter show on the control panel, if the write button is not pressed, will not be loaded to the gun

Read	Write
noud	Mile

Daystate 🕀





- Serial port is open
- 2. at the top left select FILE menu, then select save configuration file

5 DAYSTATE CONTROL PANEL	
File Device ?	
😥 Load configuration file	
Save configuration file	
[→ Exit	

3. Select a folder (or make) where you want save your file , enter the file name and press save

☑ Save configuration	n file					×
← → * ↑ 🖺	> Ques	to PC > Documenti >	ٽ ~		ocumenti	
Organizza 🔻 🛛 N	uova carl	ella				0
 ✓ Accesso rapido Desktop Download Documenti Immagini 2 E\ 		Nome folder 1 folder 2 folder 3		Ultima modifica	Tipo	^
STW-DTD m	× <					>
File Name :	My DV	/ default value				~
Save as :	Daystate	configuration file (*.xml)				~
				<u>S</u> ave	Annulla	