



Shown: Huntsman Deluxe with a thumbhole walnut stock (scope extra).

The Daystate Huntsman MkII

The Daystate Huntsman. Match-winner accuracy - combined with its classic build quality and Daystate's legendary reliability. Using a precharged delivery system pioneered by Daystate over 25 years ago, the Huntsman delivers 90 (in .22 calibre) full-power shots with unerring accuracy.

Finished in a traditional polished blued steel and a choice of 4 types of hand-finished wooden stock in either American Walnut or Beech. Each rifle comes standard with an adjustable two-stage trigger, quick filler, manual safety catch and top grade Walther barrel in a choice of calibres.

The Huntsman, equally at home on the target range as it is out in the field and with a build quality that you know is going to last.

Length	38" 96.5cm Approx.	PERFORMANCE	
Barrel length	18½" 47cm	.177 cal	80 shots at 12ft lbs. 45 shots at 20ft lbs.
Calibre	.177, .20, .22, .25	.20 cal	80 shots at 12ft lbs. 35 shots at 25ft lbs.
Weight	8.4lbs 3.85kg	.22 cal	90 shots at 12 ft lbs. 25 shots at 40ft lbs.
Action Finish	Traditional high grade blued finish	.25 cal	100 shots at 12ft lbs. 20 shots at 50ft lbs.
Stock types	Ambidextrous, Sporter, or Thumbhole in beech or walnut, or a lightweight profile stock in walnut.	Figures shown are for example only. All calibre's are available in a choice of power settings.	



DAYSTATE LTD.
Small Arms Manufacturers



Birch House Lane, Cotes, Staffs. ST15 0QQ. Tel: 01782 791755 Fax: 01782 791617
Email: daystate.ltd@virgin.net

**PLEASE READ ALL INSTRUCTIONS BEFORE USING YOUR RIFLE
IT CONTAINS IMPORTANT SAFETY & MAINTENANCE INFORMATION
FOR THE HUNTSMAN & LR90 MODELS**

LOADING AND COCKING

Turn bolt (A) anti clockwise and pull till it clicks. The bolt slides easily when the rifle is cocked.
Insert pellet into the breech (B) making sure barrel is pointing down.
Push bolt home and twist clockwise ,locating bolt pin (F) into top of slot .
Operate safety catch (C) ;safe when "S" mark is depressed.

CHARGING HUNTSMAN AND LR90 MODELS

Remove dust cap from front of reservoir.
Connect female Snap-On connector onto male, **making sure the sleeve is fully forward and connection is secure.**
If not secure the connector will disengage from the gun under pressure which could result in personal injury.
WARNING: DO NOT PRESSURISE FEMALE SNAP ON UNLESS IT IS CONNECTED TO GUN.
Check bleed screw on the gauge unit is closed and open valve on bottle slowly , pressure will now start to fill the gun reservoir.
Fill to recommended pressure and then close valve on bottle.
Open bleed valve on gauge block and bleed air out of filler hose.
When you are sure system is empty remove Snap-On connector and replace dust cap.
The gun is now fully charged and ready for use.
Always leave air pressure in your rifle , this keeps valves properly seated and prevents internal deterioration .

Important Notice.. Whilst every care and attention has been taken to ensure only the best products have been used to manufacture your new gun we must ask you not to exceed the recommendations for the gun.
The pressure chamber must always be kept in good order, should damage occur to this part, i.e. Denting, Rusting, Exposure to extreme heat or cold or any other apparent blemish we ask you to return the gun for inspection and pressure testing.
Regular maintenance of any mechanical equipment ensures longer trouble-free life therefore routine inspection and service will help to give you accurate and consistent shooting.
The recommended fill pressure must **not** be exceeded and care should be taken when filling to ensure all connections are tight and **do not** leak.

WARNING!!!!

Compressed air and oil are a highly combustible mixture. You **must not** under any circumstances put oil or spray oil anywhere near the inlet valve of your gun . Always have the dust cover in place when cleaning and oiling your gun.
You must **never** use **oxygen** in any pre-charged gun.

HUNTSMAN Mk II S.No..... Fill pressure

LR90 S.No Fill pressure

WARRANTY

12 month warranty on failure of any Daystate manufactured parts from date of purchase. Proof of purchase required.

Warranty does not cover: 1. Seals 2. Springs 3. Failure due to fair wear and tear or misuse or abuse.

Warranty is void if gun is adapted or fitted with parts other than genuine Daystate spares.



BIRCH HOUSE LANE,
COTES, SWYNNERTON,
STAFFORDSHIRE. ST15 0QQ.
ENGLAND

TEL: +44 (0)1782 791755 FAX: +44 (0)1782 791617