

DOVETAIL TO PICATINNY ADAPTOR INSTRUCTIONS

To fit: RED WOLF WOLVERINE (ALL MODELS)



Tools needed: 2.5mm allen key

1 loosen the 2x 2.4mm barrel locating screws, and remove the barrel.



2. Once the barrel is removed, screw in the barrel locating screws until the screws are flush with the breech block.




3. Slide in place the front picatinny adaptor and align as shown. Unscrew the 2x barrel locating screws until they touch the adaptor.

4. Replace the barrel. Tighten the 3 silver rail screws and two barrel locating screws

CAUTION. Ensure the barrel is the correct orientation with barrel location recesses uppermost.

DOVETAIL TO PICATINNY ADAPTOR INSTRUCTIONS

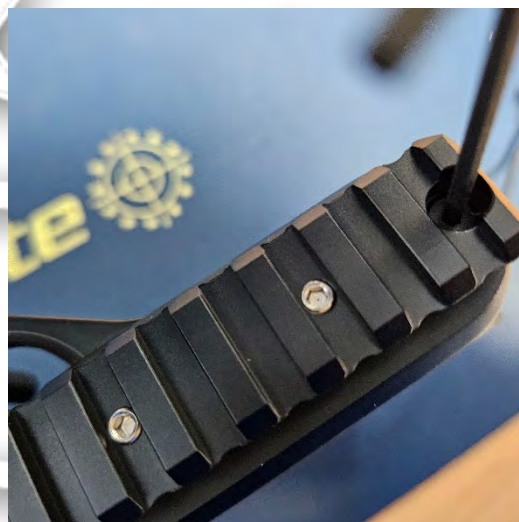

5. side in place the rear picatinny section, aligning as shown. Tighten the 3 silver rail screws.

