


DOVETAIL TO PICATINNY ADAPTOR INSTRUCTIONS

To fit: RED WOLF & WOLVERINE (ALL MODELS)

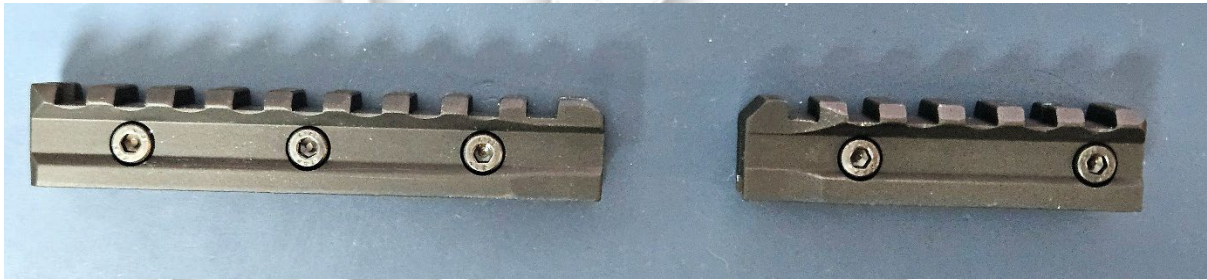

Tools needed: 2.5mm allen key (barrel screws) 3mm allen key (side screws)

1 loosen the 2x 2.5mm barrel locating screws, and remove the barrel.



2. Once the barrel is removed, screw in the barrel locating screws until the screws are flush with the breech block.

3. Slide in place the front picatinny adaptor and align as shown. Unscrew the 2x barrel locating screws until they touch the adaptor.

4. Replace the barrel. Tighten the 2x3mm rail screws and 2x2.5mm barrel locating screws

CAUTION. Ensure the barrel is the correct orientation with barrel location recesses uppermost.





5. side in place the rear picatinny section, aligning as shown. Tighten the 3x 3mm rail screws.



Low Picatinny mounts are recommended for a tidy low mount fitment.